



Removing Lenovo Thinkpad T61p RAM

This guide will show you how to remove the laptop RAM.

Written By: Glac1er



INTRODUCTION


This guide will show you how to remove the laptop RAM.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-


Step 1 — RAM

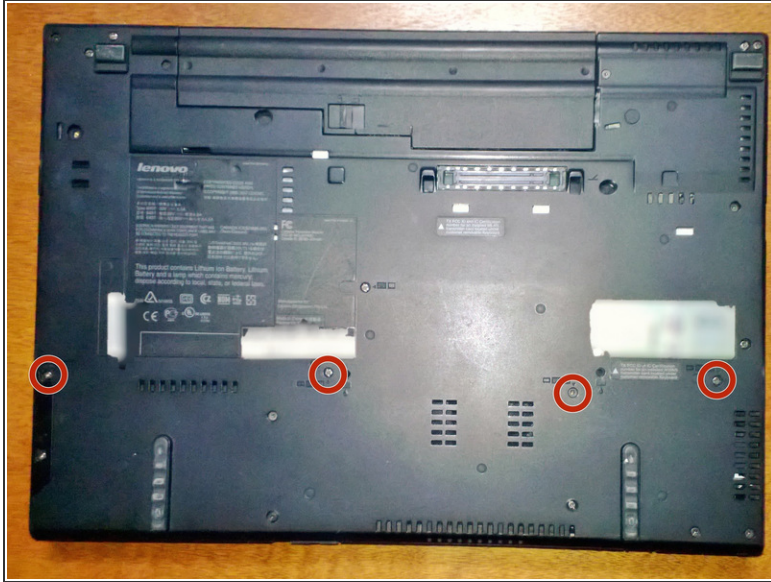

- Place the laptop on a flat surface with the underside facing up
- Remove the 4 Philips head screws.
- Turn the computer over and open the display
- Grasping each side of the palm rest, gently lift it off and rotate toward the front of the laptop


⚠ The palm rest will be connected to the main board by a ribbon cable

Step 2

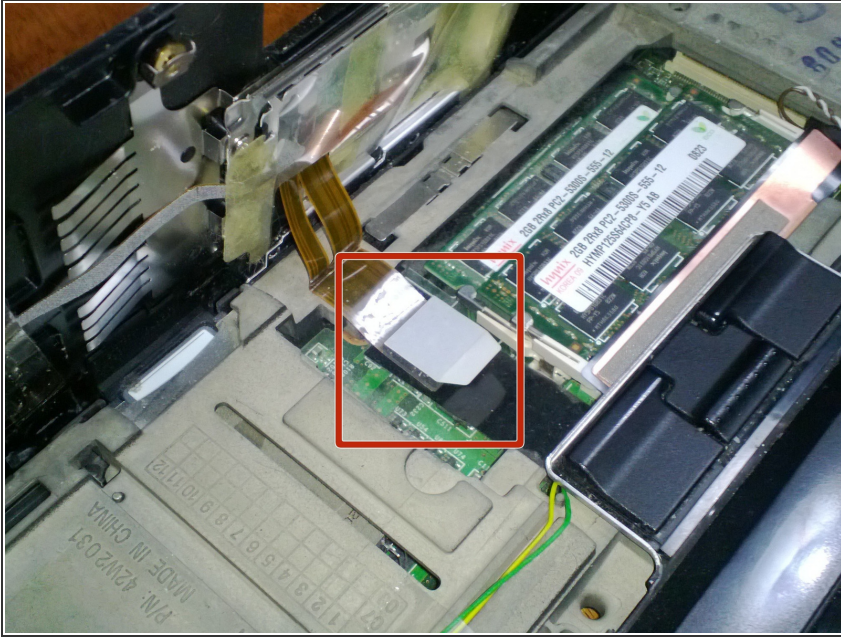

- Disconnect the touchpad ribbon cable
- ⓘ This step is recommended in the service manual however it is possible to remove the RAM without disconnecting the touchpad cable

Step 3

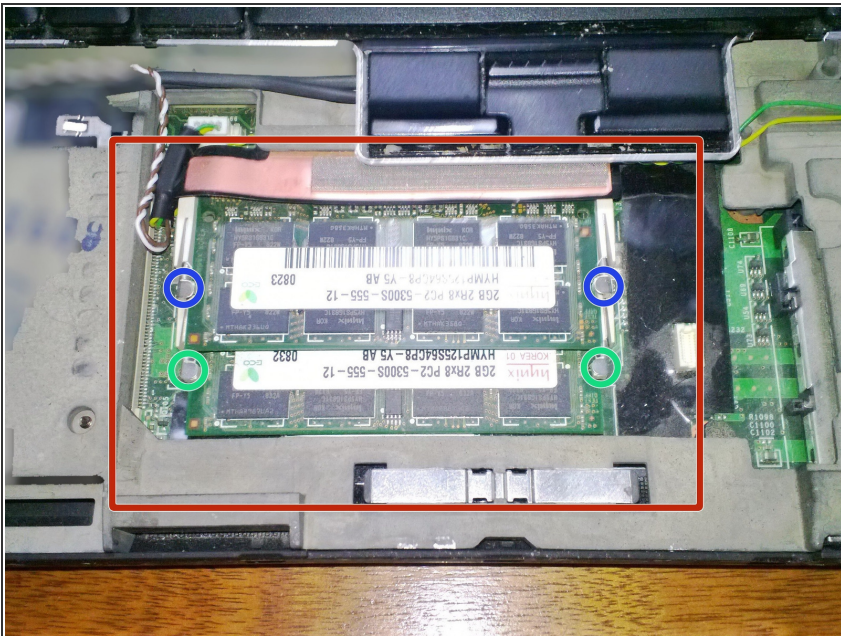

- Locate the RAM modules
- Gently press the metal tabs outwards to release the top RAM module and remove it from the laptop
- With the top RAM module removed you can release the lower RAM module in the same manner.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 04:39:16 AM.